

100

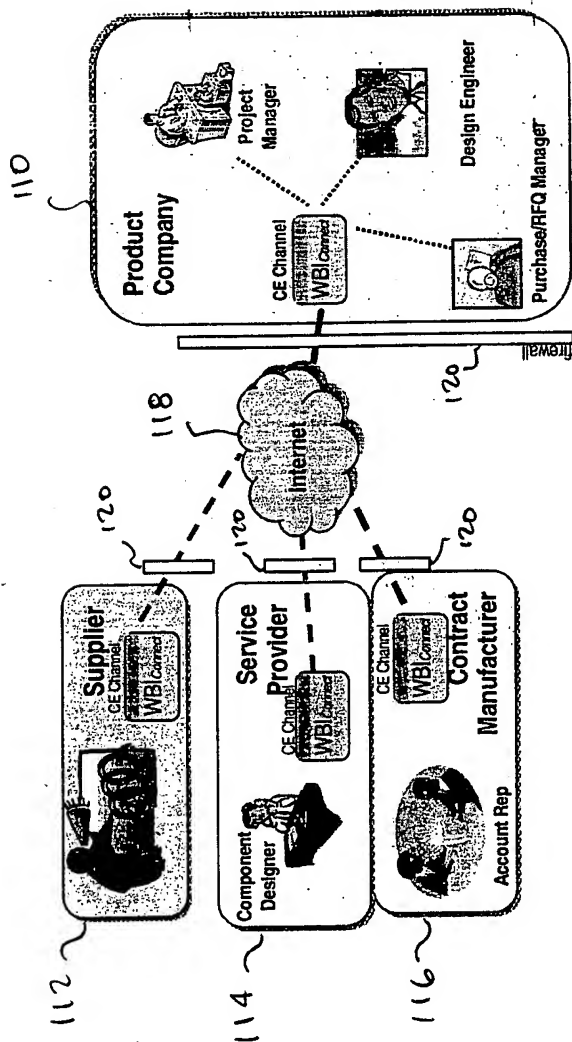


FIG. 1

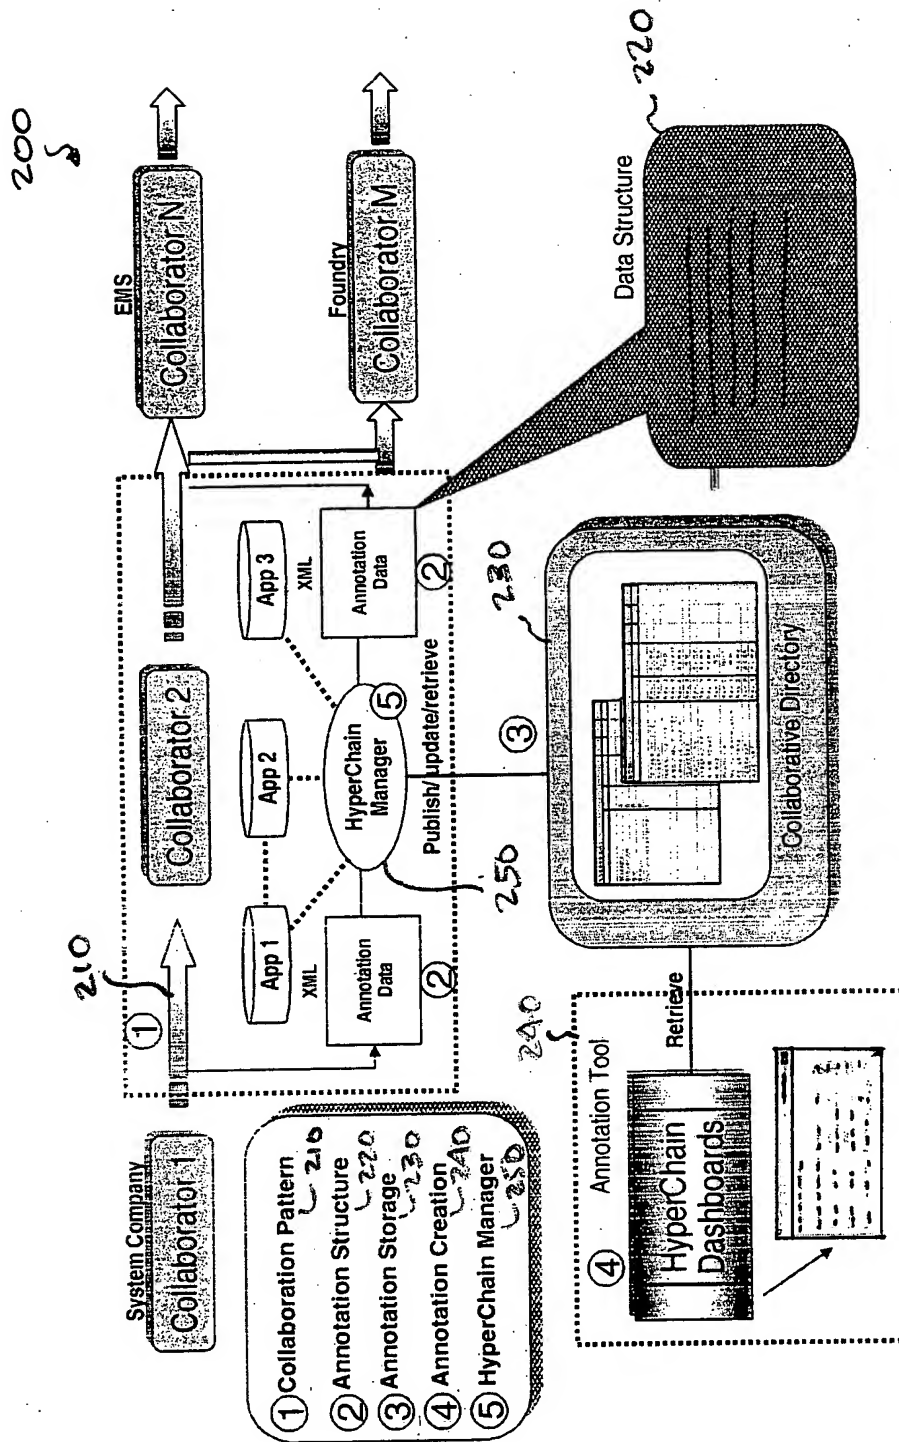


FIG. 2

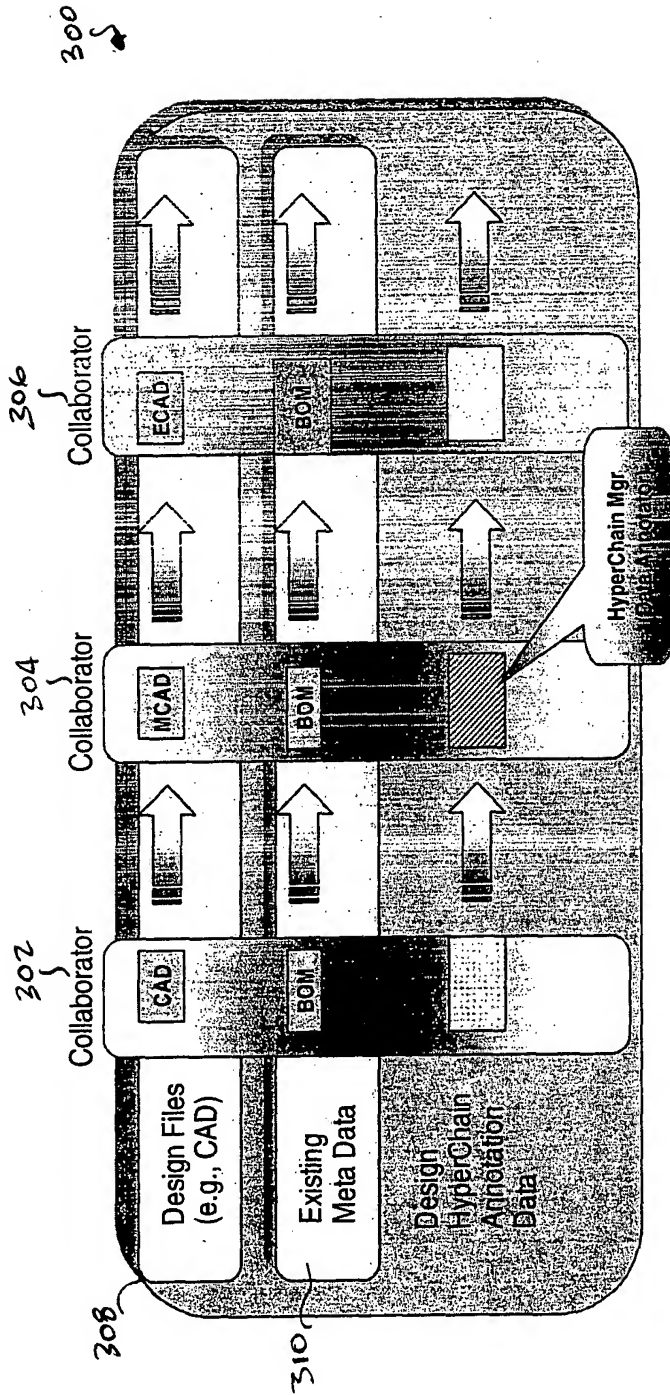


FIG. 3

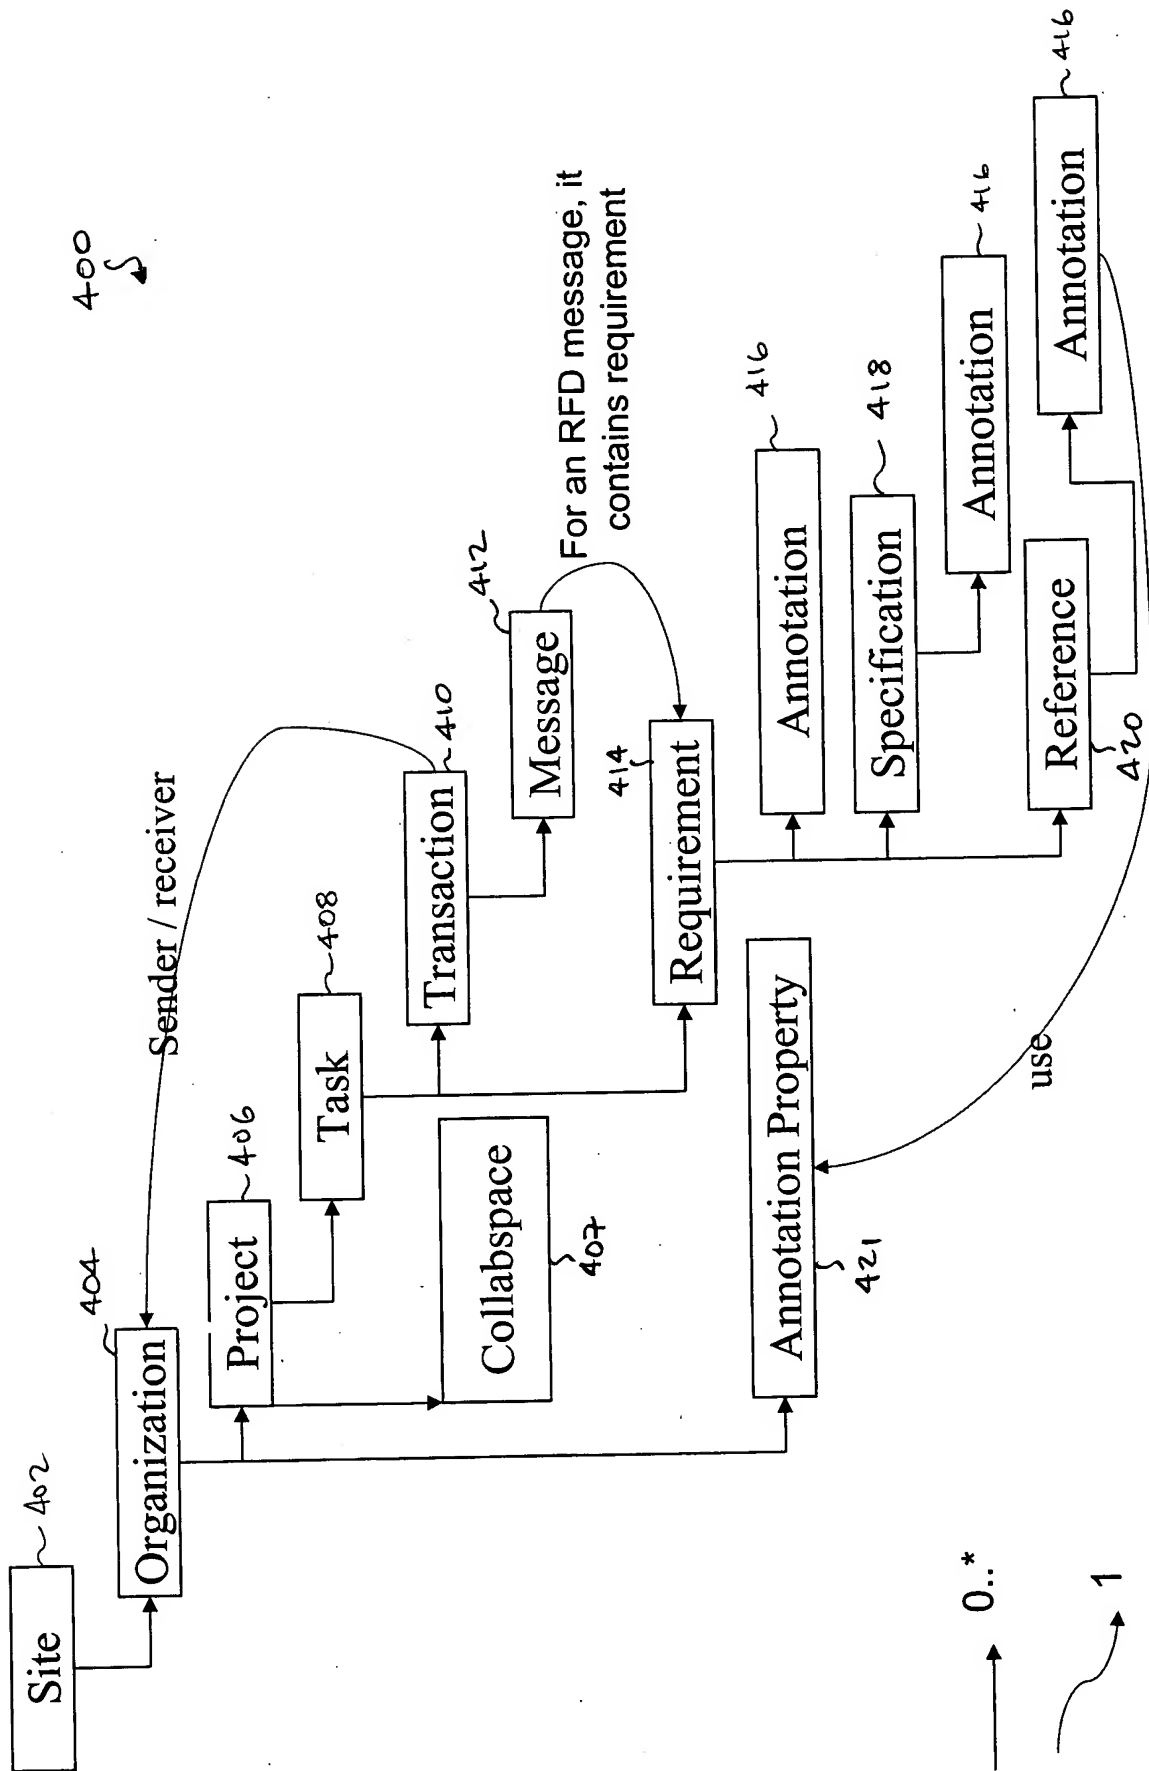


FIG. 4

500

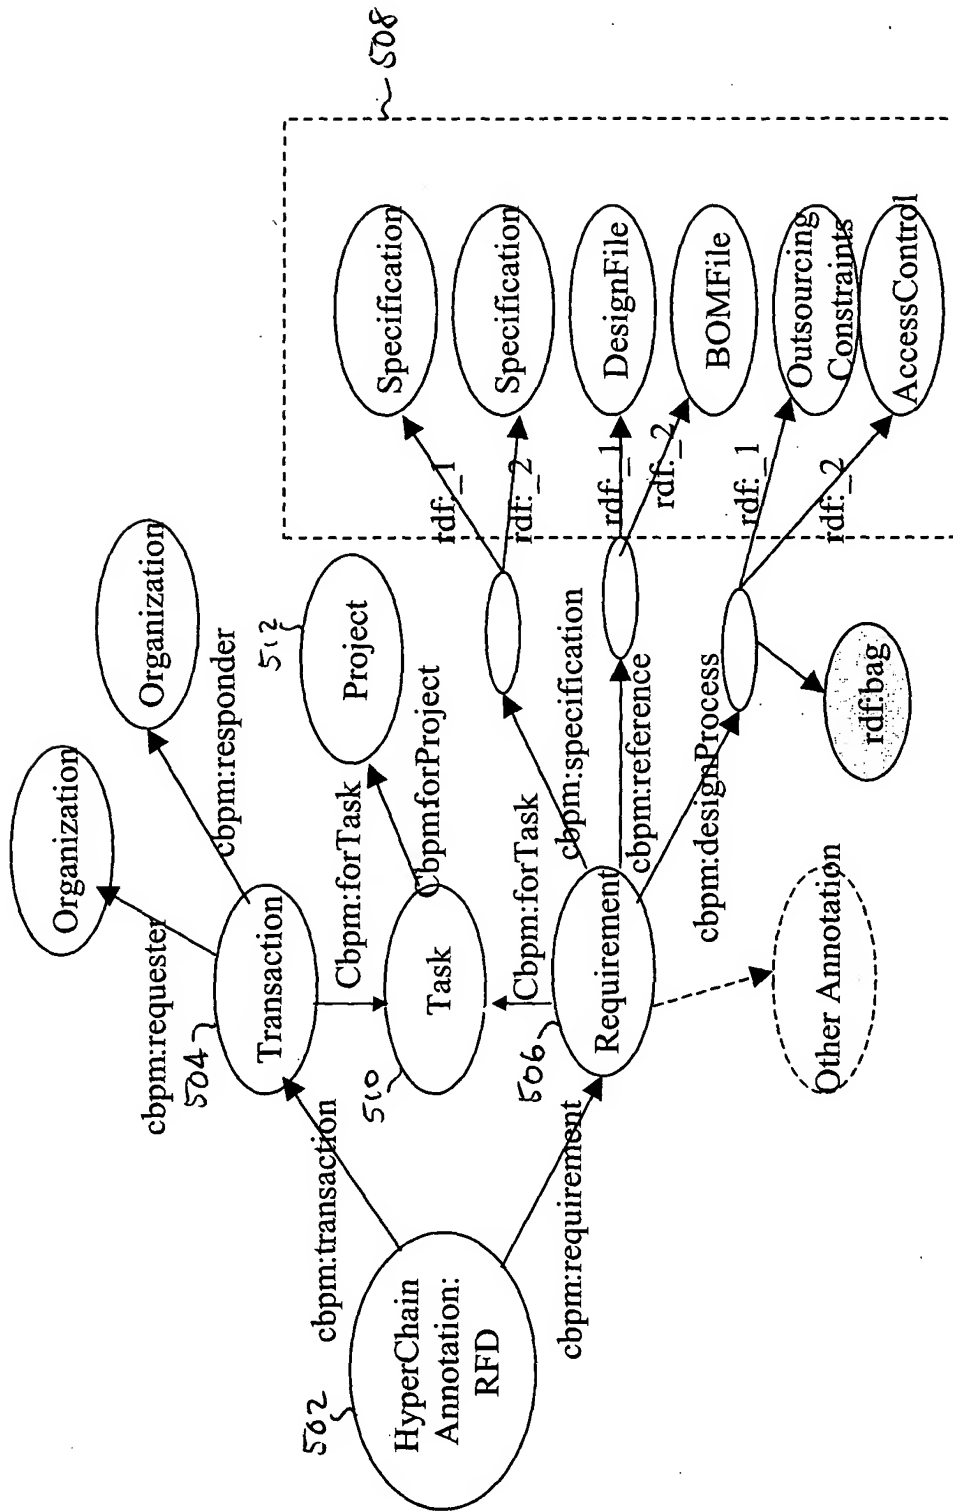


FIG. 5

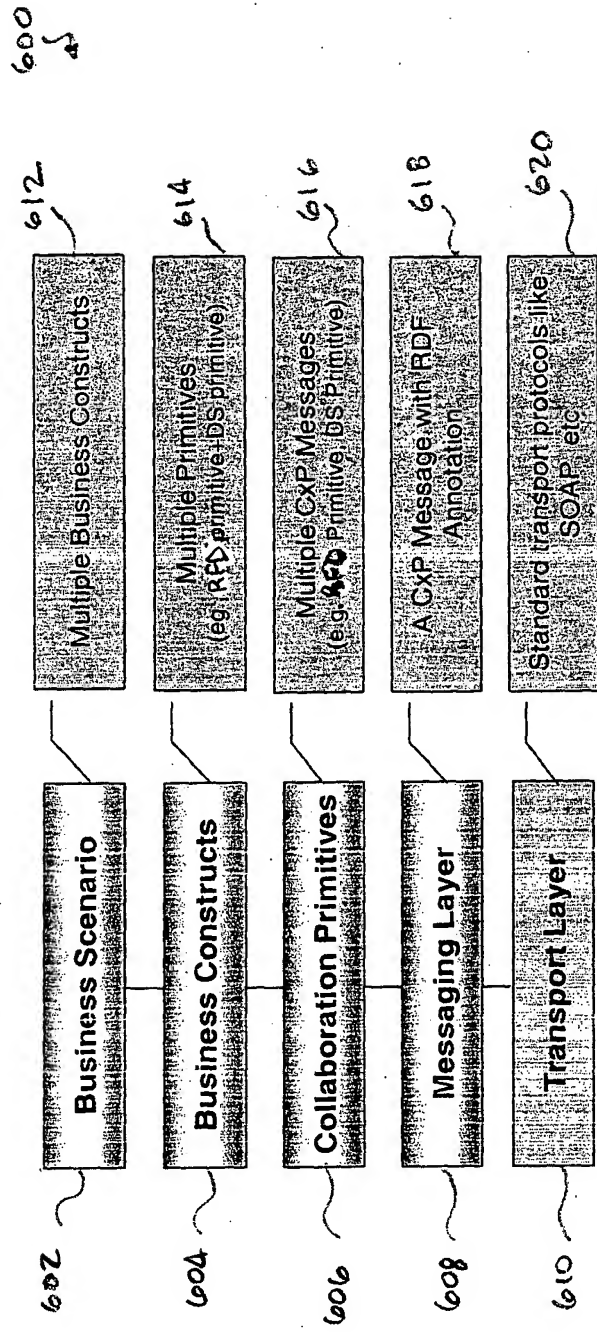


FIG. 6

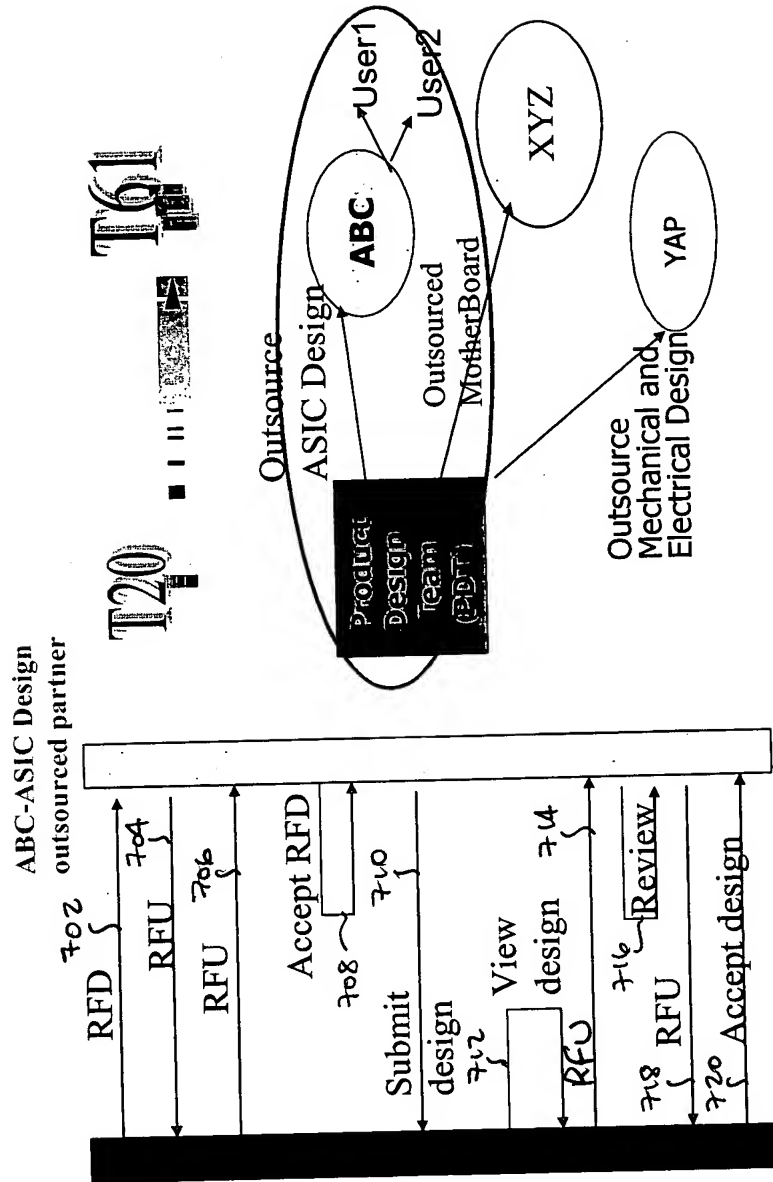


FIG. 7

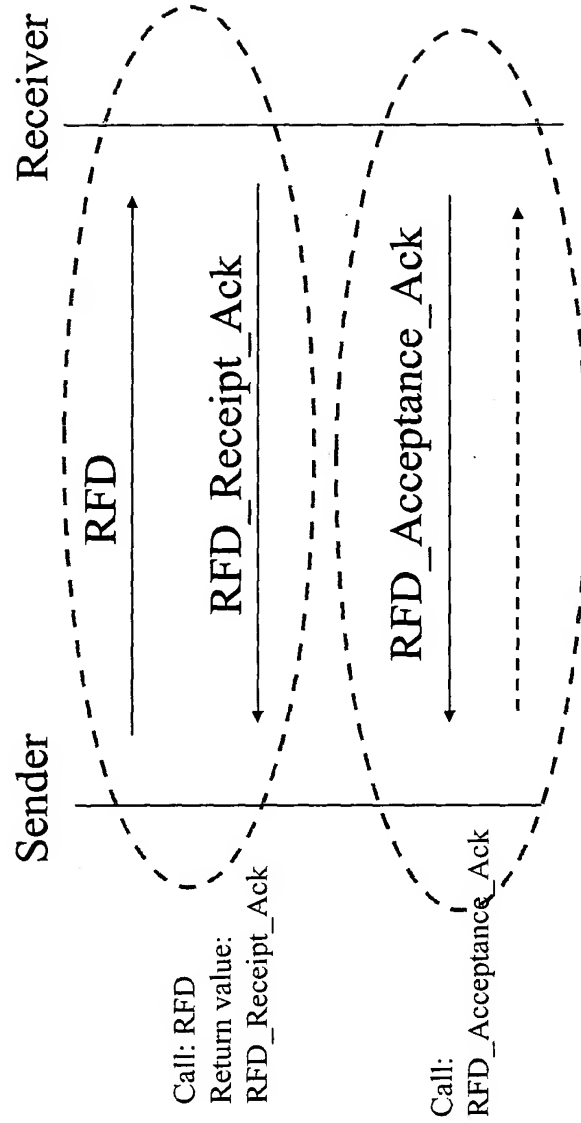


FIG. 8

9/13

900

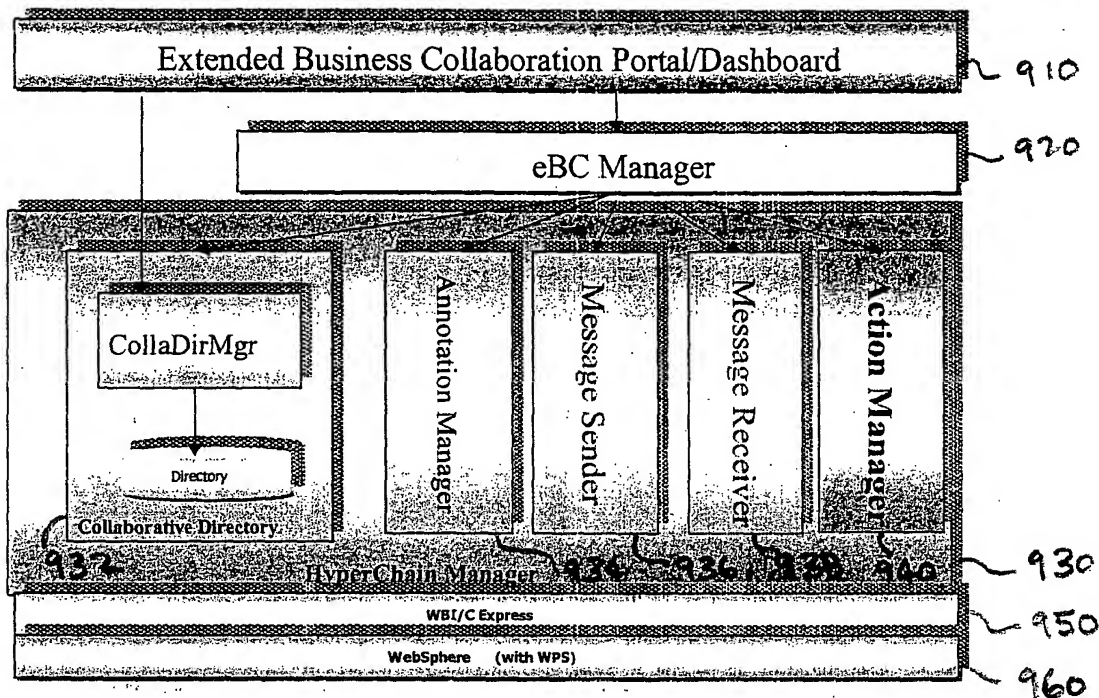


FIG. 9A

Interacts with design chain and supply chain
DC Channel

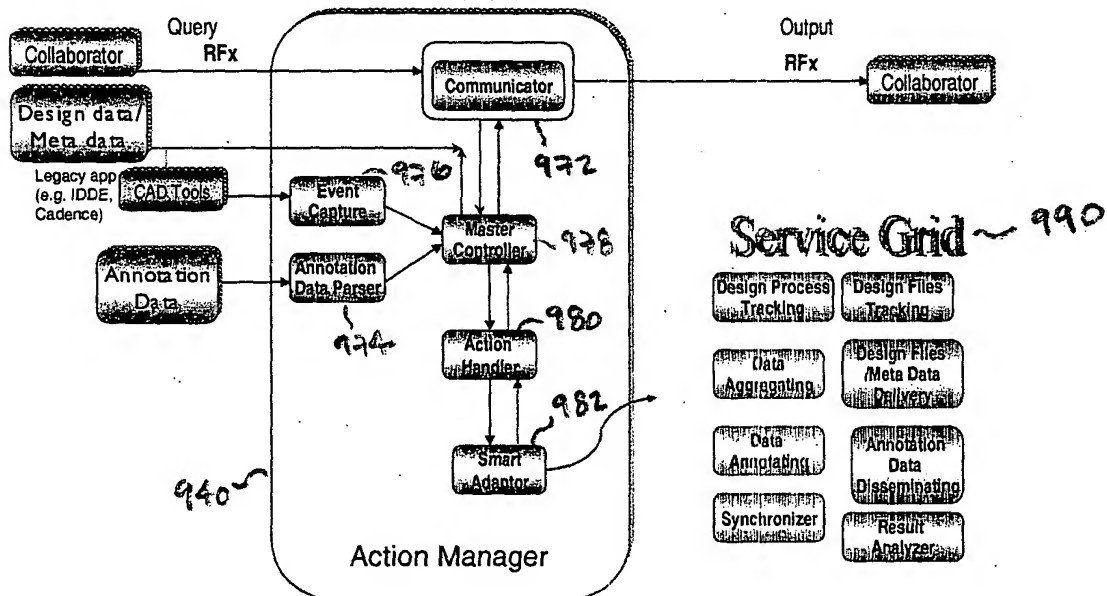


FIG. 9B

10/13

[Home](#) | [Products & services](#) | [Support & downloads](#) | [My account](#)

Design Collaboration Portal

Create a new design task for design project "T61". Click "Save" first and then choose to edit the detailed information of the task.

Basic Information

Task ID	T61_ASIC
Task Name	ThinkPad T61 ASIC Chip Design
Organization ID	YDT
Creation Date	2002-11-05
Partner ID	NEC
Partner Role	Design Partner
Description	A design project for ThinkPad T61

[Save](#) [Reset](#)

FIG. 10

[Home](#) | [Products & services](#) | [Support & downloads](#) | [My account](#)

Design Collaboration Portal

Please finish the following steps to create a new RFD.

Step1: Design Requirement Annotation

Annotation List

☒

Annotation Name

CPU Frequency

Annotation Value

1G

☒

CPU Type

Remove

Annotation Value

Intel P4

Add New

Reset

Next

FIG. 11

Design Collaboration Portal

Add specification to the requirement for task "..."

Step2: Requirement Specification Annotation

Name	Location
Requirement-1	D:\Work\ThinkPadDesign\Requirement-1...
Requirement-2	D:\Work\ThinkPadDesign\Requirement-2...

Location

Annotation List	Annotation Name	Annotation Value
<input checked="" type="checkbox"/>	File Type	PDF
<input checked="" type="checkbox"/>	Creator	John
	Remove	Add New

Back

Next

12/13

FIG. 12

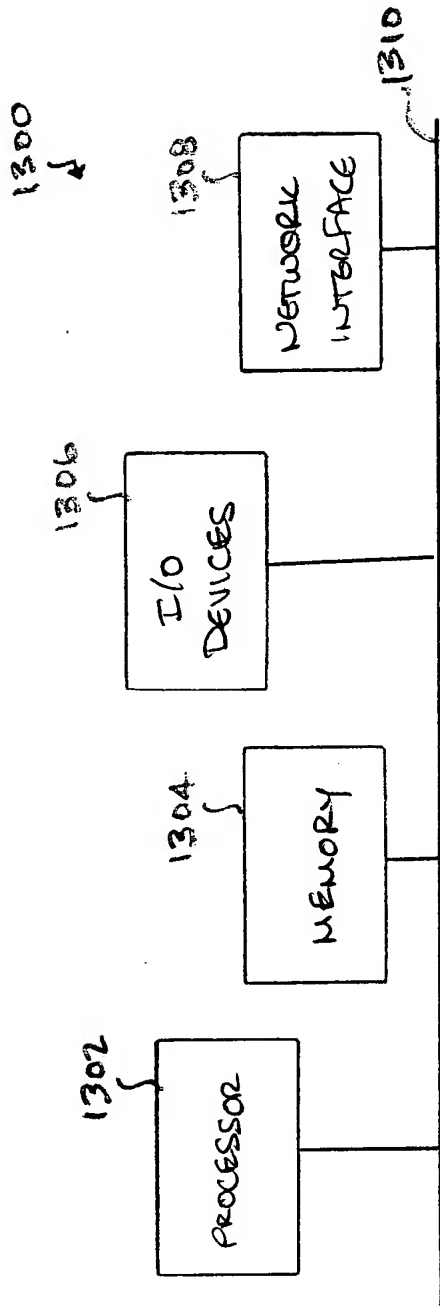


FIG. 13